BB6V - DATA SHEE

Deep Cycle 6-Volt





Application: Wherever Deep Cycle 6-volt batteries are needed

Dimensions: 10-1/4 (260)L x 7-1/8 (181)W x 11-1/4 (286)H

Type: Flooded Lead Acid (FLA) non-sealed

Case material: Polypropylene / Heat Sealed

BB6V - SPECIFICATIONS AMP BCI **Standard** MINUTES **MINUTES MINUTES** wet **HOURS** 6-hr 10-hr 20-hr 48-hr 72-hr 100-hr **Terminal** Group Model 1-hr 2-hr 5-hr **Voltage** Length Width Height Weight 75 AMPS 56 AMPS 25 AMPS Size Rate Rate Rate Rate Rate Rate Rate Rate Rate Lbs (kg) Type (20 HR. RATE) Molded-In 7-1/8 11-1/4 10-1/4 BB6V 133 152 181 187 206 232 246 252 258 6 232 122 175 62 (28) (286)UTL (181) (260)

CHARGING INSTRUCTIONS:

Following is the charging recommendation and charging profile using 2 stage chargers for US Battery deep cycle products.

*Equalization and float charge modes are not considered to be one of the stages in a charging profile.

Bulk Charge

Constant current @~10% of C/20 Ah in amps to 2.45+/-0.05 volts per cell (e.g. 7.35 volts +/-0.15 volts per 6 volt battery)
Constant voltage (2.45+/-0.05 vpc) to 3% of C/20 Ah in amps then hold for 2-3 hours and terminate charge **Absorption Change**

Charge termination can be by maximum time (2-4 hr) or dV/dt (4mv/cell per hour)

Constant voltage 2.17 vpc (6.51 volts per 6 volt battery) for unlimited time • (Optional Float Charge)

• Equalization Charge Constant voltage (2.55+/-0.05 vpc) extended for 1-3 hours after normal charge cycle (repeat every 30 days)

> **Notes:** Charge time from full discharge is 9-12 hours.

Absorption charge time is determined by the battery but will usually be ~3 hours at 2.45 volts per cell. Float time is unlimited at 2.17 volts per cell. Specific gravity at full charge is 1.270 minimum.

Battery temperature adjustment: reduce the voltage by 0.028 Volts per cell for every 10°F above 80°F, increase by the same amount for temperatures below 80°F.


Deep cycle batteries need to be equalized periodically. Equalizing is an extended, low current charge performed after the normal charge cycle. This extra charge helps keep all cells in balance. Actively used batteries should be equalized once per month.

 
Manually timed chargers should have the charge time extended approximately 3 hours.


Automatically controlled chargers should be unplugged and reconnected after completing a charge.

Bayonet Vent Cap Option:



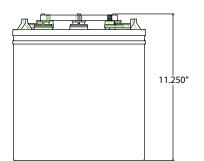




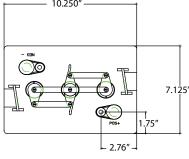

10.250" -

EXPECTED LIFE CYCLES VS. DOD -Flooded Battery Cycle Life -AGM Battery Cycle Life (>200 Ah) ▲ AGM Battery Cycle Life (<200 Ah) Expected Average Depth of Discharge (% of 20 Hour Capacity)

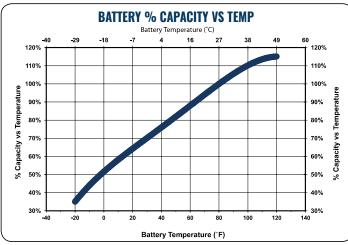



BB6V - DATA SHEET Deep Cycle 6-Volt

Pure Energy Battery Terminal Type	Recommended Torque (in-lb)	Recommended Torque (ft-lb)	Recommended Connection Hardware
UTL	95-105	7.9-8.8	¹ SS Hexnut with Lock Washer
UT	95-105	7.9-8.8	¹SS Hexnut with Lock Washer
Flat Block	95-105	7.9-8.8	¹SS Hexnut with Lock Washer
Dual	95-105	7.9-8.8	1/6SS Hexnut with Lock Washer
DC Marine	95-105	7.9-8.8	² SS Hexnut with Lock Washer
Off-Set "S"	100-120	8.3-10	³ Zn or SS Bolt w/Hexnut & Lock Washer
Flag	100-120	8.3-10	⁴ Zn or SS Bolt w/Hexnut & Lock Washer
Large "L"	100-120	8.3-10	⁴ Zn or SS Bolt w/Hexnut & Lock Washer
Small "L"	100-120	8.3-10	⁴ Zn or SS Bolt w/Hexnut & Lock Washer
Bus Lug	100-120	8.3-10	5SS Hexnut with Lock Washer
SAE	100-120	8.3-10	⁶ No Hardware Supplied

Proper connection is to position a lock washer between the nut and the connector (never between the connector and lead terminal) and apply the recommended torque or enough torque to completely compress the lock washer without deforming the lead terminal.

Stainless Steel Hexnut with Stainless Steel Split-Ring Lock Washer (5/16" Positive & Negative)

²Stainless Steel Hexnut with Stainless Steel Split-Ring Lock Washer (3/8" Positive & 5/16" Negative)


³Square-Head, SS or Zinc-Plated Bolt with SS or Zinc-Plated Hexnut & Split-Ring Lock Washer

4Square-Head or Hex-Head, SS or Zinc-Plated Bolt with SS or Zinc-Plated Hexnut & Split-Ring Lock Washer

Stainless Steel Hexnut with SS Split-Ring Lock Washer (1/2" Positive or 3/8" Positive & 3/8" Negative)

6No Hardware Supplied - Application Uses SAE Clamp for Positive & Negative Tapered Post

Note: The use of flanged nuts and other types of nuts with captive washers or other hardware not sted above is not recommended by Pure Energy Battery and their use may void the battery warranty

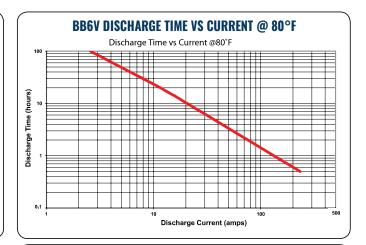

Pure Energy Battery Operating Temperature Guidelines

For charging, we recommend staying within 0°F to 120°F (-18 to 49°C) to avoid charging frozen batteries at low temperature or going into thermal runaway at high temperature.

For discharging, we recommend -20°F to 120°F (-29 to 49°C). Batteries discharged at temperatures below 32°F (0°C) should be recharged immediately to avoid freezing.

Batteries discharged at temperatures above 120°F (49°C) should be allowed to cool before recharging.

Extreme temperatures can substantially affect battery performance and charging. Cold reduces battery capacity and retards charging. Heat increases water usage and can result in overcharging. Very high temperatures can cause "thermal run-away" which may lead to an explosion or fire. If extreme temperature is an unavoidable part of an application, consult a battery/charger specialist about ways to deal with the problem.

Data references within this publication are nominal and should not be considered or construed as maximum or minimum values for specifications or for final design. Data for this product type and model may vary from what is shown in this publication, and U.S. Battery Mfg., Co. makes No warranties, expressed or implied based on the data within this publication.

©2025 Energy Products, Inc. All rights reserved. Pure Energy Battery is not liable for damages that may occur from any information provided in or omitted from this publication, under any circumstances. U.S. Battery Mfg., Co. reserves the right to make changes or adjustments to this publication at any time without notices or obligations